


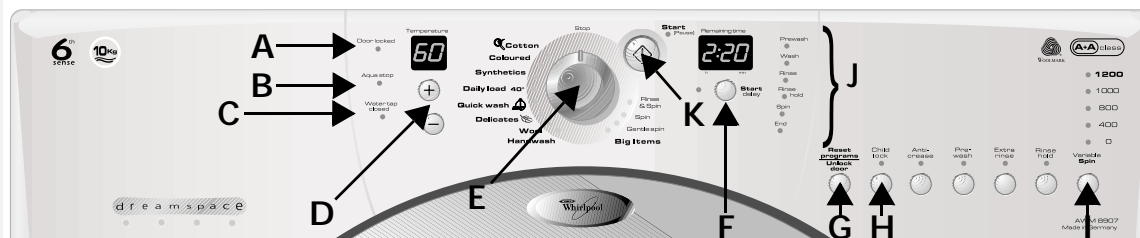

- A. "Door locked" indication  
 B. "Aqua stop" indication  
 C. "Water tap closed" indication  
 D. Temperature selection buttons  
 E. Programme selector  
 F. "Start delay" button  
 G. "Reset programs/Unlock door" button  
 H. "Child lock" button  
 I. "Variable spin" button  
 J. Programme sequence indicator  
 K. "Start/Pause" button



Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically and a signal sounds.

\* : optional / yes: dosing required.

Programme	Care labels	Type of wash/Notes  - For temperature selection, respect the manufacturer's recommendation on the care label.	Max. Load  kg	Detergents and additives			Special Options						Max. Spin Speed  rpm	Temperature  °C
				Pre-wash 	Main wash 	Softener 	Start delay	Anti-crease	Pre-wash	Extra rinse	Rinse hold	Variable Spin		
Cotton	 	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. At a temperature of 80°C or more, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001. With heavily soiled laundry the additional "Prewash" option can be selected as well.	10.0	*	Yes	*	*	*	*	*	*	*	1200	20 to 95
Coloured	 	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	10.0	*	Yes	*	*	*	*	*	*	*	1200	20 to 60
Synthetics	 	Slightly to normally soiled blouses, shirts etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	4.5	*	Yes	*	*	*	*	*	*	*	1000 <sup>1)</sup>	20 to 60
Daily load 40°	 	Programme for slightly to normally soiled fabrics made of cotton and/or synthetic fibres.	4.5	—	Yes	*	*	*	—	*	*	*	1200	20 to 60
Quick wash	 	Slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	4.5	—	Yes	*	*	*	—	*	*	*	1200	20 to 30
Delicates		Curtains and delicate dresses, skirts, shirts and blouses.	3.0	*	Yes	*	*	*	*	*	*	*	1000 <sup>1)</sup>	20 to 40
Wool		Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" provided that they are washed according to the instructions on the garment label and those issued in this programme chart. If you select "Rinse Hold" do not leave items to soak for too long.	2.0	—	Yes	*	*	*	—	—	*	*	1000 <sup>1)</sup>	20 to 40
Handwash		Textiles made of silk, linen, wool and viscose marked as "handwashable". If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.	2.5	—	Yes	*	*	*	—	—	*	*	400 <sup>2)</sup>	20 to 40
Big items	 	Blankets made of synthetic fibres, bedcovers filled with polyester or other artificial fibres, sleeping bags, bathmats and similar items.	3.0	*	Yes	*	*	—	*	*	*	*	1000 <sup>1)</sup>	20 to 95
Gentle spin	—	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	4.5	—	—	—	*	—	—	—	—	*	1000 <sup>1)</sup>	—
Spin	—	In this programme spinning is intensive. Same as the spin cycle in the "Coloured" programme.	10.0	—	—	—	*	—	—	—	—	*	1200	—
Rinse & Spin	—	Same as the last rinse and the final spin in the "Coloured" programme.	10.0	—	—	*	*	—	—	*	*	*	1200	—

1) For improved garment care spin speed is restricted to 1000 rpm in this programme.  
 2) For improved garment care spin speed is restricted to 400 rpm in this programme.

The wool wash cycle for this machine has been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0301



## CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approximate programme duration* (hours : minutes)
Cotton / Antibacterial	95	10.0	99**	3.15	2:45
Coloured***	60	10.0	92	1.70	2:45
Coloured	60	4.0	50	1.10	1:35
Coloured	40	10.0	92	0.96	2:35
Synthetics	40	4.5	58	0.65	1:30
Daily load 40°	40	4.5	58	0.65	1:00
Quick wash	30	4.5	38	0.40	0:30
Delicates	30	3.0	70	0.45	0:50
Wool	40	2.0	60	0.50	0:35
Handwash	30	2.5	60	0.30	0:31
Big items	40	3.0	85	0.80	1:30

Prewash cycle increases programme duration by approximately 15 min. Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* The remaining time indicator can deviate from the values in the table, because it takes into account the operating conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\*\* Reference programme for energy label.

## ADD DETERGENT, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergent as described in the programme table or in the chapter "Detergent and Additives" of the Instructions for Use.

1. Turn the **programme selector** to the desired programme.
2. The remaining time display shows the duration of the chosen programme (in hours and minutes) and the lamp of the **"Start/Pause"** button flashes.
3. The indicator of the predefined spin speed corresponding to the selected programme lights up; it can be altered by pressing the **"Variable spin"** button. The recommended temperature (see indicator) can be altered by pressing the **"+"** or **"-"** button.

## SELECT ANY DESIRED OPTION

Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically and a signal sounds.

### "Anticrease" button

- Can be selected to reduce creasing.
- Increases the water quantity and the clothes are spun very gently.

### "Prewash" button

- Only for heavily soiled laundry (e.g. sand, granular dirt). The cycle time increases by approx. 15 minutes.
- Do not use liquid detergent for the main wash when activating the "Prewash" button.

### "Extra rinse" button

- More water and a longer time in rinse cycle is added.
- This option is particularly suitable for areas with very soft water, for baby clothes and to help people with allergies.

### "Rinse hold" button

- The laundry remains in the last rinse water without being spun: this prevents creasing and colours from changing.
- This option is particularly recommended for the programme "Synthetics" or "Delicates".
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

**Note:** The programme stops to "Rinse hold" as soon as the "Rinse hold" light in the programme sequence indicator lights up.

### Terminate the "Rinse hold" option:

- Press the "Rinse hold" button again; the programme will terminate automatically with the final spin cycle for the present wash programme.

- If you do not wish to spin the clothes, press the "Reset programs/Unlock door" button. The water is drained out then, before the door can be opened.

### "Variable spin" button

- Every programme has an automatic predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

## START DELAY

The "Start delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating the "Start delay".

- Select programme, temperature and options.
- Press the "Start delay" button to select the delay time by 1 to 23 hours;
- Press the **"Start/Pause"** button.
- The time delay indication disappears when the programme starts and it is replaced by the remaining time.
- The number of hours preselected can later be reduced pressing again the "Start delay" button.

### To cancel the "Start delay".

- Turn the programme selector to the "Stop" position.
- Reselect the desired programme and options and press the **"Start/Pause"** button.

## PROGRAMME START

Turn on the tap and press the **"Start/Pause"** button. The pilot lamp of the **"Start/Pause"** button lights up.

The indicator lamps show the sequence reached in the programme. After starting the programme, the sequence indication runs from top to bottom through Prewash, Wash, Rinse, Spin.

When a sequence of the programme is finished the corresponding lamp goes out.

## ADD WASHING/DOOR LOCK

Each time a programme starts the door is locked, the "Door locked" indication light comes on and approx. 0.5 litres of water enters the machine. In the programmes Cotton / Antibacterial, Coloured, Synthetics, Daily load 40° and Quick wash, for 10 minutes at the beginning of the Main Wash the programme can be interrupted by pressing the **"Start/Pause"** button and the door can be opened again, e.g. to add more washing. After this time, the door remains locked until the end of the programme and must on no account be forced open. You will find more information about door locking in the Instructions for Use.

## PROGRAMME END

- The time remaining is "0:00" and the "End" light is on.
1. Turn the programme selector knob to the "Stop" position.
  2. Turn the tap off and leave the door ajar to allow the drum to dry.

## CHANGE THE PROGRAMME, TEMPERATURE, OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to interrupt the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

Press the "Reset programs/Unlock door" button for at least 3 seconds. Any existing water is drained out before the door can be opened. Caution, the washing could still be hot!

## CHILD LOCK

Detailed information can be found in the instructions for use.

The controls can be locked to avoid interference by children.

1. If the machine is off:  
Turn the programme selector knob from the OFF position "Stop" to any programme. Do not press the **"Start/Pause"** button. Press the "Child lock" button for 5 seconds. The "Child lock" indicator lights up. Turn the programme selector knob to the OFF position "Stop" again.
2. While a programme is running:  
Press the "Child lock" button for 5 seconds. The child lock indicator will light up.

Now, in spite of the programme selector knob being turned, no programme can be started or altered. However, a running programme can be stopped at any time (e.g. in an emergency), by turning the programme selector knob to "Stop". Attempts at changing during the running programme are signalled by the lamp of the accidentally chosen programme flashing. The indicator light for the actual programme running is on. To unlock the controls, the machine must either have a programme running or be in select mode. Press the "Child lock" button for 5 seconds. The child lock lamp will go out.

## HOT / COLD FILL INSTRUCTION

### If you wish to connect hot and cold water supply (Fig.1):

1. Fix the red marked inlet hose at the hot water tap and at the inlet valve with the red filter on the rear side of machine.
2. Fix the other inlet hose at the cold water tap and at the inlet valve with the blue filter on the rear side of the machine.

#### Make sure:

- a) The connections are tightly fixed
- b) Do not invert their position (for example: cold fill into hot inlet valve and viceversa).

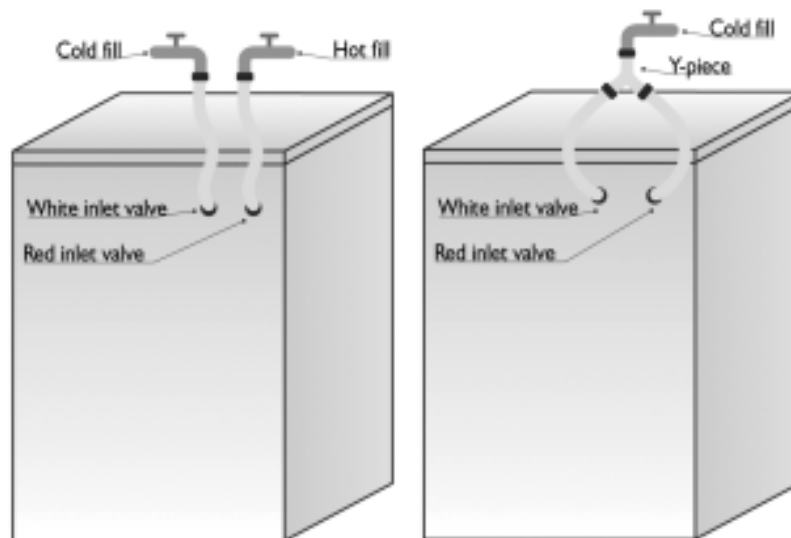


Fig.1

Fig.2

### If you wish to connect only the cold fill follow the below instruction (Fig.2):

1. You need a Y-piece connector.  
The Y-piece connector can be ordered via our Service Organization or purchased in a specialized hydraulic component store.
2. Fix the Y-piece connector to the cold fill tap.
3. Connect the two inlet valves present on the rear part of the machine to the Y-piece connector using the relative provider hoses.

#### Make sure:

All connections are tightly fixed.

**Do not allow children to operate, crawl on, near or inside your washer.**

**Note that during wash cycles, the surface temperature of the porthole door may increase.**

**Close supervision of children is necessary when the appliance is used near children.**